


# **ASSEMBLY INSTRUCTIONS**

Ref. no. 0458-395-1241



## ACCESSORY PACKAGE F2 SAW CARRIAGE

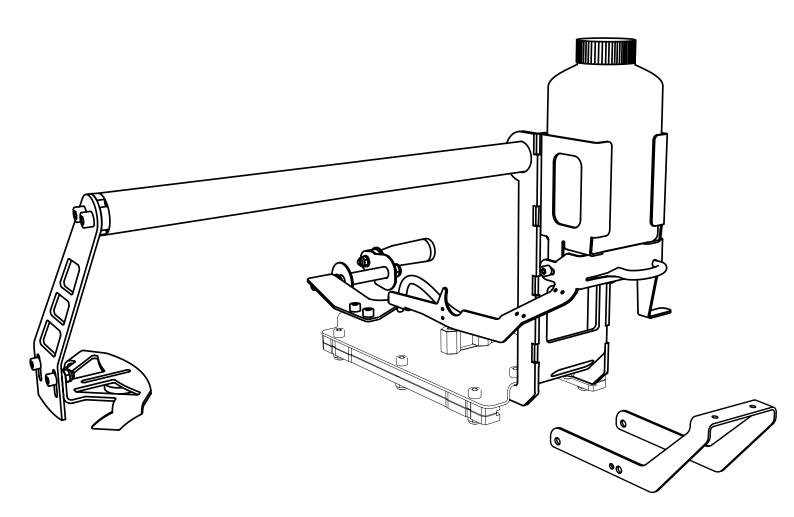


## 


## TABEL OF CONTENTS

Components	4
Bolt bags	[
Assembly: saw carriage	6
Assembly: crank	7
Assembly: bar nose steering	8
Assembly: water cooling	1(
Assembly: line attachment & line	12
Adjustment: saw carriage	13
Adjustment: bar nose steering	14
Adjustment: bar nose steering Adjustment: water cooling	14 1


## **COMPONENTS: CRANK AND BAR NOSE STEERING**

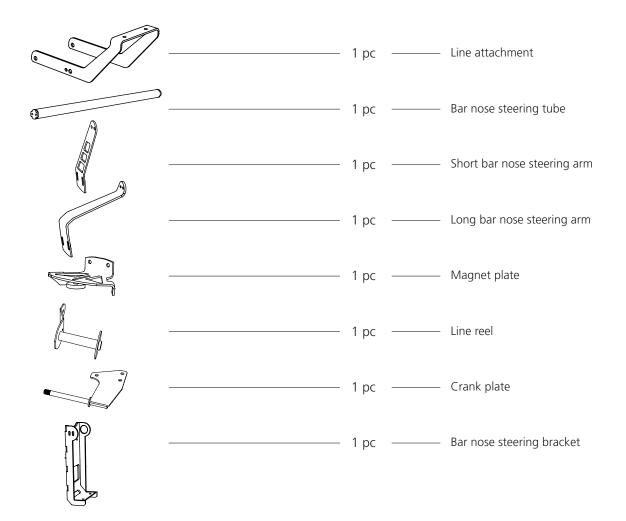


### **COMPONENTS: WATER COOLING (ACCESSORY)**

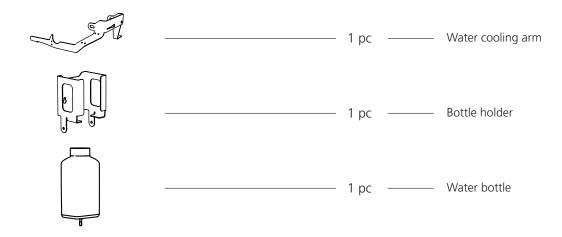

### **BOLT BAG: CRANK AND BAR NOSE STEERING**

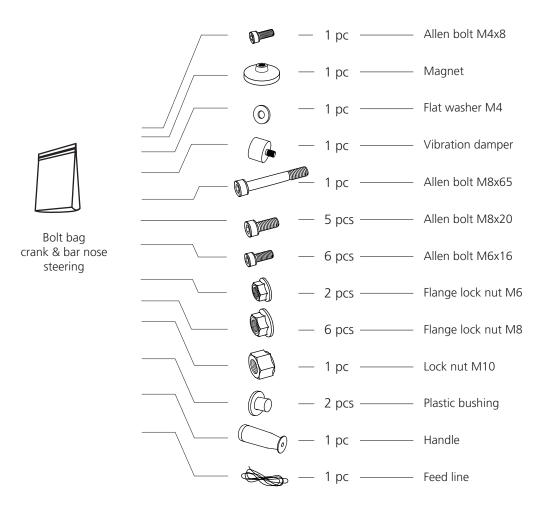

### **BOLT BAG: WATER COOLING (ACCESSORY)**

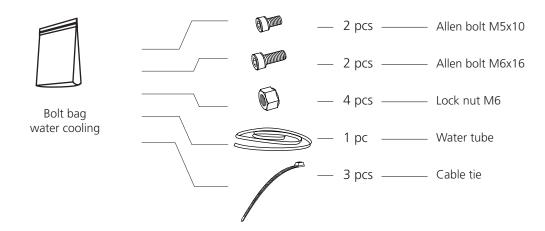


### **ASSEMBLY: SAW CARRIAGE**

m – 6 pcs — Allen bolt M8x30

### 🕥 – 6 pcs – Lock nut M8

⊙ − 6 pcs — Wave washer M8

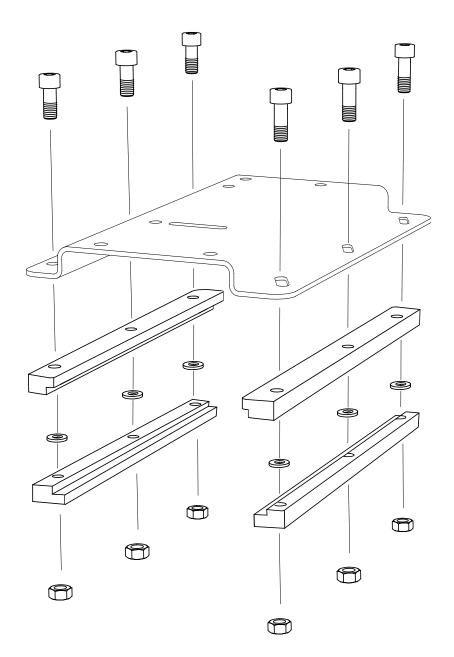



6


## **ASSEMBLY: CRANK**




Fit the handle to the line reel.

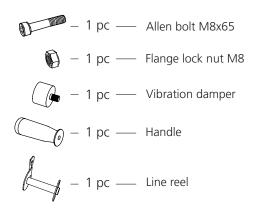

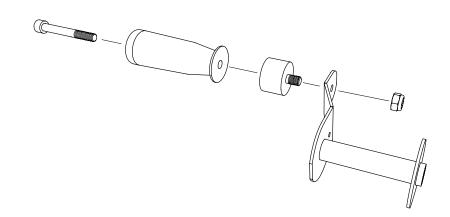

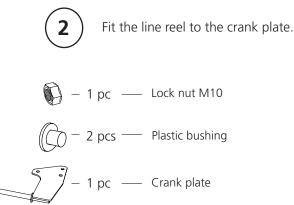


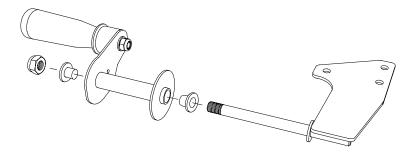




Install the crank plate on the saw carriage.




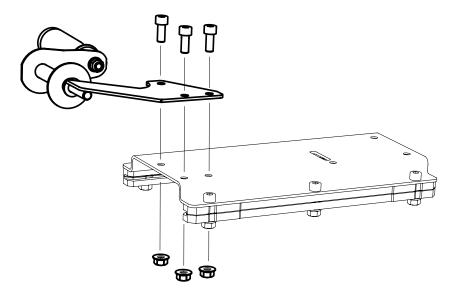


## **ASSEMBLY: BAR NOSE STEERING**

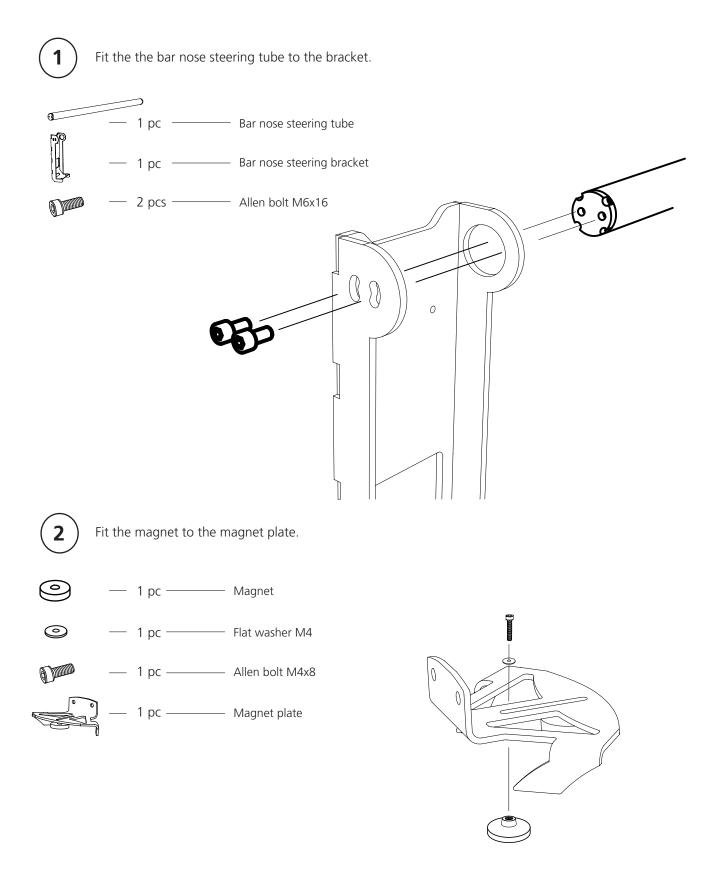

There are two different bar nose steering arms. Use the arm that is adapted for the guide bar you are going to use. Fit the magnet plate to the bar nose steering arm.

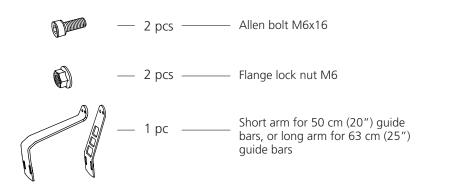

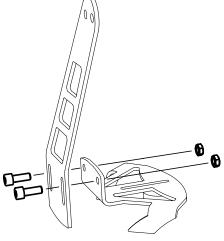


(4)


3

Fit the bar nose steering arm to the bar nose steering tube.


- 2 pcs — Allen bolt M6x16

50 cm 20″

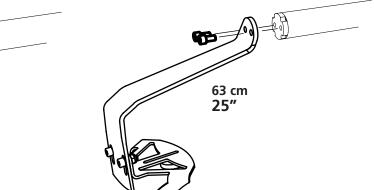

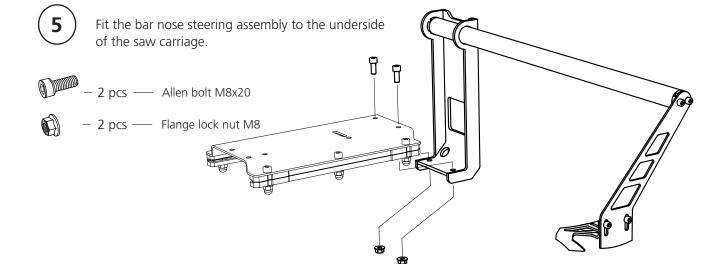


## **ASSEMBLY: WATER COOLING (ACCESSORY)**

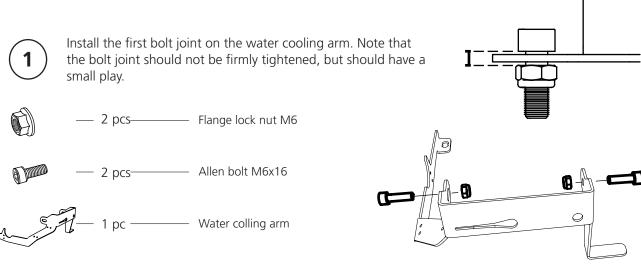




Fit the water cooling arm to the bottle holder. Squeeze the bottle holder together at the same time as you gently bend the water cooling arm outwards to make the bolts fit in the holes in the bottle holder. Be careful not to deform the water cooling arm.

 $\mathbb{C}$ 

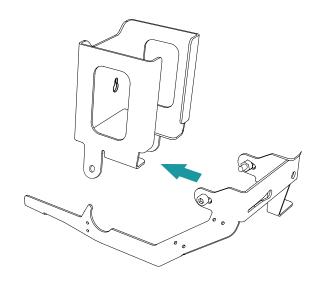


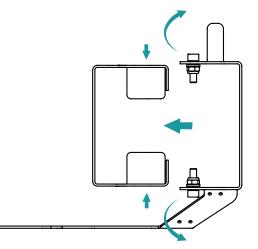





Secure the water cooling arm on the bottle holder. Tighten the bolt joints firmly.

— 2 pcs — Flange lock nut M6

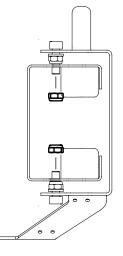

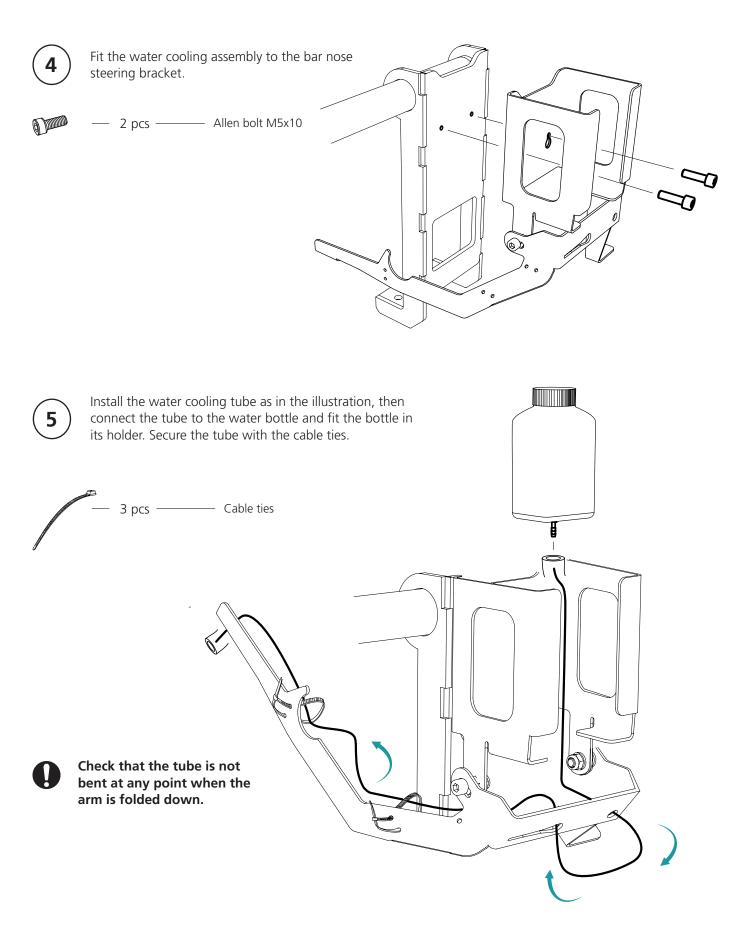


## **ASSEMBLY: LINE ATTACHMENT & FEED LINE**

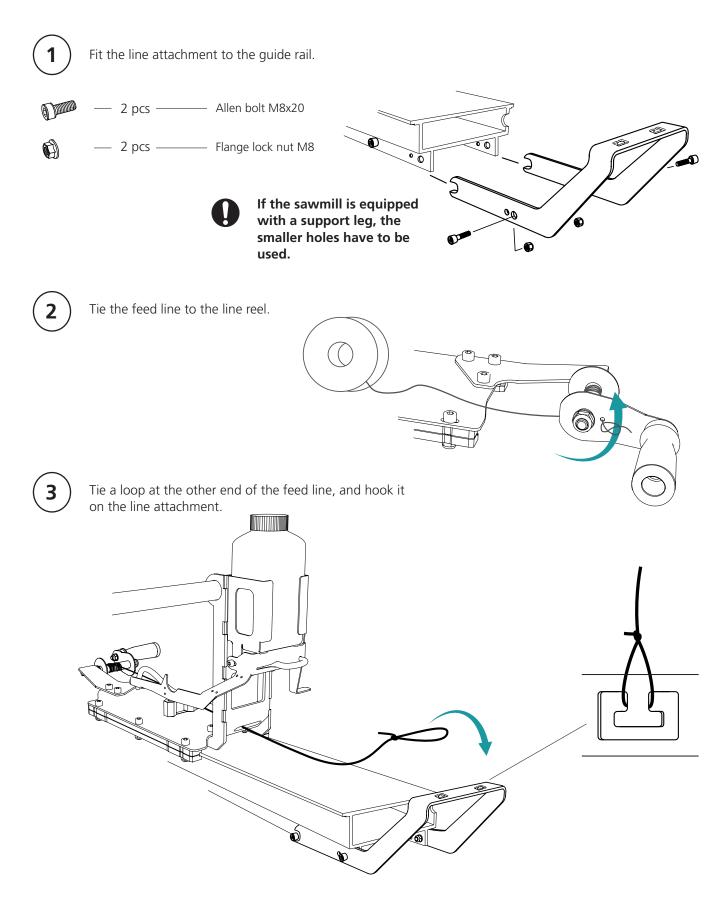

### **ADJUSTMENT: SAW CARRIAGE**


#### Adjust the vertical play

Tighten the slide rails together to adjust the vertical play between the slide rails and the guide rail.

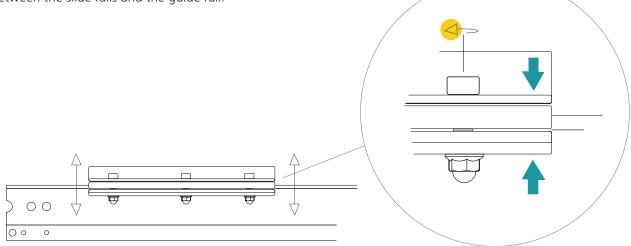

#### Adjust the horizontal play


On the operator side, adjust the slide rails outwards or inwards, using the three fixed positions, to minimize the horizontal play between the slide rails and the guide rail.

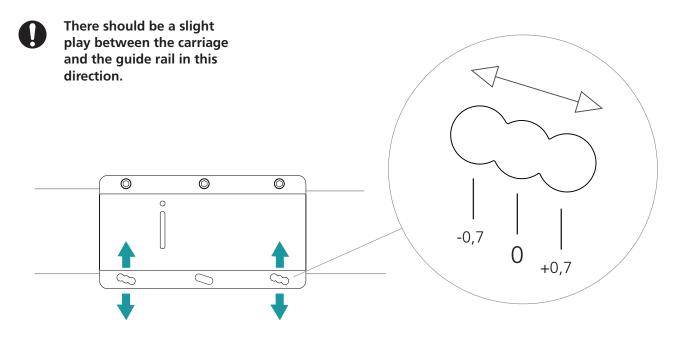

### **ADJUSTMENT: BAR NOSE STEERING**

#### Adjust the bar nose steering tube

Rotate the tube to make the magnet plate parallel to the guide bar.

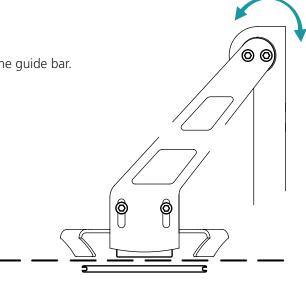


#### Adjust the magnet plate

Move the magnet plate up or down in the tracks. The guide bar should not be pulled up or pressed down too much, but should be parallel to the log bed.




Check that the guide bar is parallel to the log bed.

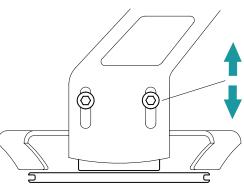

#### Adjust the magnet


Move the magnet inwards or outwards to centre it on the bar nose. Make sure it does not come too close to the chain.

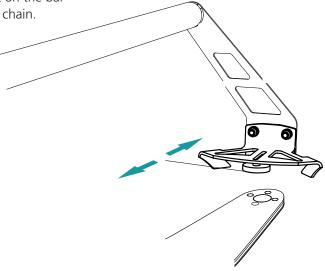

## ADJUSTMENT: WATER COOLING

#### Water cooling ON/OFF

To turn off the water cooling: fold up the arm and hook it on the bar nose steering tube.

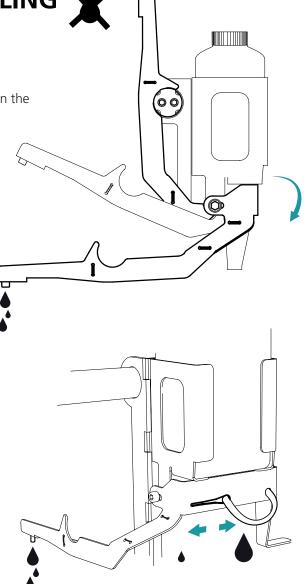


#### Adjust the flow

To adjust the water flow: change the position of the water tube in its track.

#### Adjust the position

At the end of the water cooling arm there are two positions for the water tube. Position the tube so that it is in line with the edge of the guide bar.

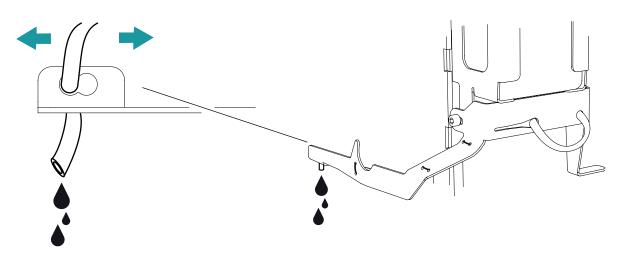



Fiskaregatan 2, 871 33 Härnösand, SWEDEN +46 611 182 85 | info@logosol.com | www.logosol.com